Support for Leica ADS40/ADS80 sensor in «Delta/Digitals» software


Images from Leica ADS40/80 pushbroom camera (Level 1) can be used for 3D stereo mapping, orthophoto, etc with the latest version of Ged program.

Orientation data and project structure must be present as follows:

🗅 \\Gate\Images\ADS40\Disc1\Data 📃 🗖 🔀				
<u>F</u> ile <u>E</u> dit <u>V</u> iew F <u>a</u> vorites <u>T</u> ools <u>H</u> elp 🥂				
🕒 · 🔊 · 🎓 🂫 🎼 🖗 🗙 👋				
Address 🛅 \\Gate\Images\ADS40\Disc1\Data 🛛 🛃 Go				
Calibration Calibration Orientation Support				
4 objects (plus 1 0 bytes 🤤 Local intranet 🛒				

Images folder contains TIF images (L1, color or grayscale) from different camera channels. Outside (in level-up folder) or in folder with images must be present folders named as **Calibration**, **Orientation** and **Support**:

Calibration folder contains CAM-files with camera parameters:

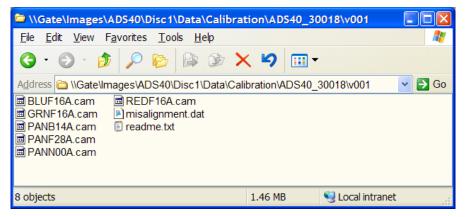

Support folder contains SUP-files with basic information about every image:

\\Gate\Images\ADS40\Disc1\Data\Support					
<u>F</u> ile <u>E</u> dit <u>V</u> iew F <u>a</u> vorites <u>T</u> ools <u>H</u> elp 🥂					
G · 🕤 · 🏂	🔎 陵 🚯	🖻 🗙 🗳	•		
Address 🛅 \\Gate\Images\ADS40\Disc1\Data\Support 🛛 🕑 Go					
 L006260944PANN00A.sup L106260944PANB14A.sup L106260944PANF28A.sup L106260944PANN00A.sup L106260944PANN00A.sup L106260944RGBF16A.sup 					
5 objects	9.11 KB	🧐 Local intranet			


Orientation folder contains ODF-files with absolute orientation data for every image:

\\Gate\Images\ADS40\Disc1\Data\Orientat	tion	
<u>F</u> ile <u>E</u> dit <u>V</u> iew F <u>a</u> vorites <u>T</u> ools <u>H</u> elp		A.
G · 🕤 · 🎓 🔎 🕞 🕞 🗡	< ♥ 💷 ▪	
Address 🛅 \\Gate\Images\ADS40\Disc1\Data\Orie	entation	👻 🄁 Go
Image: 06260944BLUF16A.odf.adj Image: 06260944BLUF16A.odf.adj Image: 06260944GRNF16A.odf.adj Image: 06260944RGBF Image: 06260944PANB14A.odf.adj Image: 06260944BLUF1 Image: 06260944PANF28A.odf.adj Image: 06260944BLUF1	16A.odf.adj 🗐 16A.odf 🗐 16A.odf 🗐	06260944PANF28A.odf 06260944PANN00A.odf 06260944REDF16A.odf 06260944RGBF16A.odf
14 objects	45.5 MB	Secol intranet

In case if adjusted (more accurate) absolute orientation data are present in file ***.ODF.ADJ** program will use these dada instead of initial ***.ODF** files.

Loading ADS40 images to Delta/Digitals

To open georeferenced L1 raster images in Delta use **Raster|Open Left**..., **Raster|Open Right**... main menu commands. Then program will automatically locate and load appropriate **SUP/CAM** and **ODF** or **ODF**.**ADJ** files. Once opened the images are ready for stereo/mono mapping, etc.

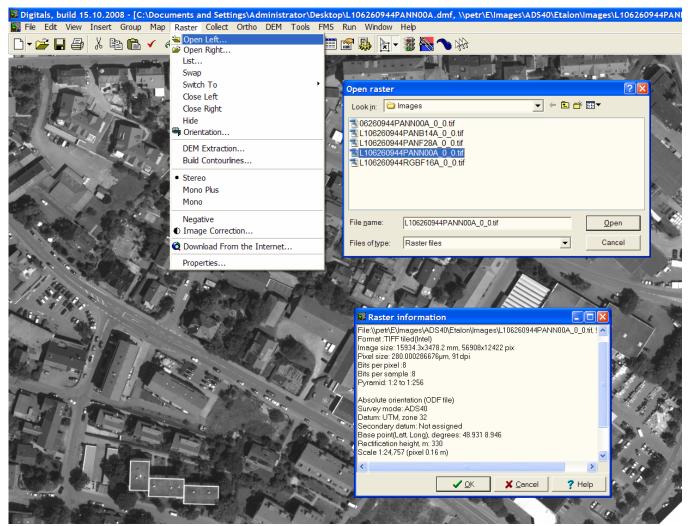

We recommend to convert original images to TIF-tilled format and to create pyramids in **DIPEdit** program to speed up performance.